

Cooker hood Instruction manual

Model No: GALICIA

CONTENT

1.....	Notice
2.....	Feature
3.....	Installation
4.....	Notice of installation
5.....	Safety Warning
6.....	Use
7.....	Maintenance

NOTICE


1. Thank you for choosing our cooker hood. Please read the instruction manual carefully before use.
2. The installation work must be undertaken by a qualified and competent fitter.
3. The manufacturer disclaims all liability for any damage or injury caused as a result of not following instructions for installation contained in the following text.


(2)FEATURE

- 1.** The cooker hood uses high quality materials, and is made with a streamlined design.
- 2.** Equipped with a large power low noise electric motor and centrifugal leaf, it produces strong suction, low noise, non stick grease filter and easy to clean.
- 3.** With the isolated low voltage circuit board control, 12vAC input, the lights are therefore safer.
- 4.** Special wind tunnel construction and oil collector design, free dirt will be absorbed in a second.

(3).INSTALLATION


1. The ceiling must can bear at least 40kgs weight, and the thickness of the ceiling must be $\geq 30\text{MM}$, see pic 2, drill 1*170mm round hole in the ceiling.
2. According to the hanging board, drill 12 holes in the ceiling, see pic 2, 12pcs of ST6*40mm big flat screws will be used to fix the hanging board on the ceiling, and then 8pcs of M4*10 screws and M4 nut with gasket will be used to connect the angle iron into the hanging board, see pic 1, calculated the length of the angle iron, and 16pcs M4*10 big flat screws and M4 nut with gasket will be used to connect the angle iron and another angle iron (the overlap length of angle iron can not less 100MM)
3. Let the one side of the extensible pipe go outside through the hole of 170MM, see pic 3.
4. 4pcs ST4*8 big flat screws will be used to connect the internal chimney into the hanging board, then put one the external chimney, two hooks will be used to put up the external chimney in order to the next installation, see pic 4.
5. 4pcs ST4*8 big flat screws will be used to install the outlet, see pic 5.
6. Adjust the 4 glass screws to check whether the glass and the cooker hood body connected well and fixed, see pic 6.
7. Hold up the hood, 16pcs M4*10 big flat screws will be used to connect the hood body into angle iron, see pic 7.
8. Put the extensible pipe on the outlet; after ensure all the things ok, put down the hook, take from the external chimney, all the installation is finished, see pic 9.

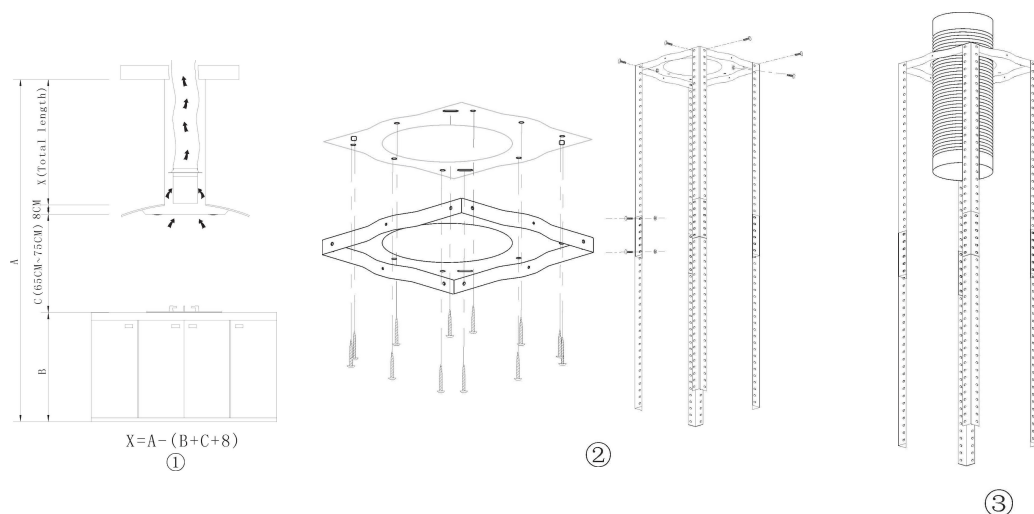

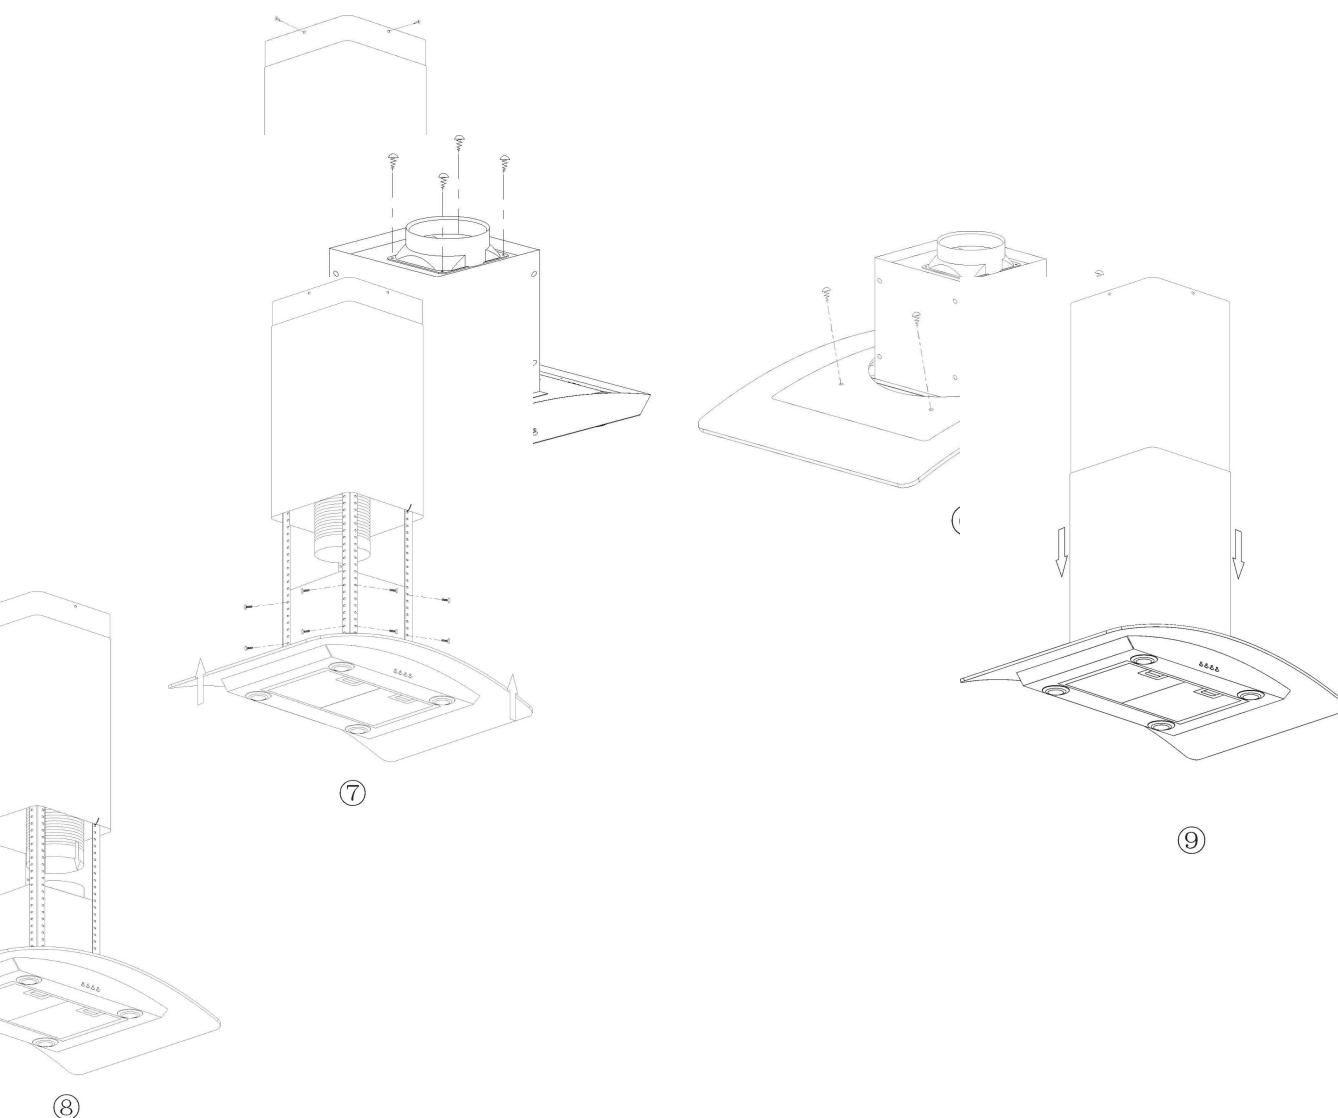

(4) NOTICE OF INSTALLATION

1. Before installation, please ensure the area is clean to avoid suction of the remaining bits of broken wood and dust.
2. It cannot share the same air ventilation tube with other appliance such as gas tube, warmer tube, and hot wind tube.
3. The bending of ventilation tube should be $\leq 120^\circ$, parallel or above the start point and should be connected to the external wall.
4. After installation, make sure that the extractor is level to avoid grease collection at one end.

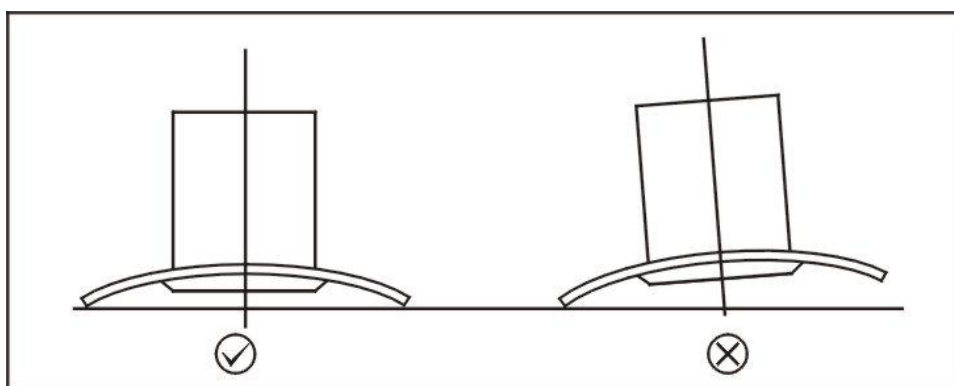


(5) SAFETY WARNING

- Never let the children operate the machine
- The cooker hood is for home use only, not suitable for barbecue, Roast shop and other commercial purpose.
- Please ask the technical person to do the assembling.
- The cooker hood and its filter mesh should be clean regularly in order to keep in good working order.
- Before cleaning, please switch the power off at the main supply.
- Clean the cooker hood according to the instruction manual and keep the cooker hood from the danger of burning.
- If there is any fault with the appliance, please call the service department to arrange a service engineer.

(6) SPEED ADJUSTMENT

OPERATION

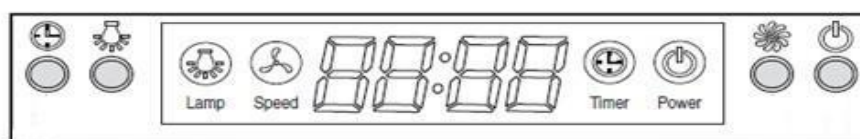

1. Plug the hood; LCD will display 24-hour system with blue backlight. Backlight will be extinguished after 15 seconds without any operation.

2. Press “” button once; lights will be on and LCD will show “ Lamp”. Press “” button again; lights will be off and “ Lamp” on LCD will disappear.
3. Press “” button once; the hood works at LOW speed and LCD will show “ Speed” and “” button will be on. Press “” button again; the hood works at MEDIUM speed. Press “” button one more time; the hood works at HIGH speed. Press “” button again; the hood works at LOW speed again and it repeat. While pressing “” button; the “” button is always on. If you want to stop the hood now; press the “” button once.
4. When the hood is not working; press “” button once. The hood will work at the speed it works last time and LCD will show “ Speed”. Press “” button again; the hood stop working and “ Speed” will disappear from LCD.
5. When both “” button and “” button don’t work; “” button is used for time-setting. Press “” button for 2 to 3 seconds;  will be shown on LCD and  flashes; which represents hour. Press “” button once the number adds by 01. Continue pressing “” button; it will display from 13;14... until 23. When LCD shows 23; it doesn’t work by pressing “” button. Press “” button once; the number reduces by 01. When LCD shows 00; it doesn’t work by pressing “” button. After setting hour; you can start setting minute by pressing “” button again.  on LCD flashes; which represents minutes. Press “” button once the number adds by 01. Continue pressing “” button; it will display from 01;02... until 59. When LCD shows 59; it doesn’t work

by pressing “” button. Press “” button once; the number reduces by 01. When LCD shows 00; it doesn't work by pressing “” button. After setting hour and minute; press “” to confirm.


6. When “” button doesn't work; “” button is used for delay timer function. Delay timer function allows you to set the hoods automatically power off according to the delay timer you set from 1 minute to 60 minutes. Press “” button once; it enters for delay timer setting and LCD shows . Press “” button once the number adds by 01. Continue pressing “” button; it will display from ; ;  ... until  Press “” button once; the number reduces by 01. After setting delay timer you want; press “” button to confirm. If you set delay timer as 05:00; the LCD display will show from 05:00; 04:59... until 00:01 00:00. When LCD shows 00:00; the hood will automatically power off and LCD display will only show 24-hour system with blue backlight. After 30 seconds without operation; blue backlight will disappear. But please note the Lamp is not under control of delay timer. Next time; if you want to use delay timer function and you press “” button without any change on time. The hood will automatically count time down from your previous setting after 5 seconds.

(7) MAINTENANCE

7.1 The cleaning of the carbon grease filter mesh

The filter mesh is made of high-density stainless steel. Please do not use the corrosive detergent on it. Keeping this filter clean will keep the appliance running correctly. Please strictly follow the guidelines below.

Put the mesh into 40-50 c clean water, pour on detergent, and soak for 2-3 mins. Wear gloves and clean with a soft brush. Please do not apply too much pressure, as the mesh is delicate and will damage easy.

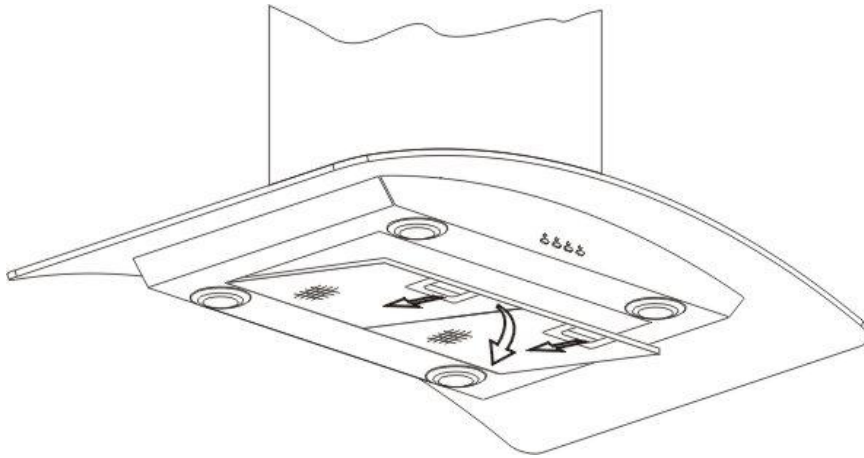

7.2 Notice of cleaning cooker hood

- A. To protect the main body from corrosion over a long period of time, the cooker hood should be cleaned with **warm** water plus non corrosive detergent every two months.
- B. Please do not use abrasive detergent for it will damage the body.
- C. Please select a suitable cleaning agent based on the material of the body.
- D. The stainless steel must be cleaned regularly (e.g. weekly) to ensure long life expectancy. Dry with a clean soft cloth. A specialized stainless steel cleaning fluid may be used.
Note: Ensure that wiping is done along with the grain of the stainless steel to prevent any unsightly crisscross scratching patterns from appearing.
- E. The control panel can be cleaned using warm soapy water. Ensure the cloth is clean and well wrung before cleaning. Use a dry soft cloth to remove any excess moisture left after cleaning.
Important: Using neutral detergents and avoid using harsh cleaning chemicals, strong household detergents or products containing abrasives, as this will affect the appliance

appearance and potentially remove any printing of artwork on the control panel and will void manufactures warrantee.

- F. Keep the motor and other spare parts free from water, as this will cause damage to the appliance.
- G. Before cleaning the appliance please remember to cut off power
- H. The carbon filter shouldn't be exposed to heat.
- I. Please don't tear open the fixed bar around the carbon filter
- J. If the plug or cord is damaged, please replace it with special soft cord.

CONTENIDO

- 1.....Aviso
- 2.....Características

3.....	Instalación
4.....	Precauciones de Instalación
5.....	Advertencia de Seguridad
6.....	Uso
7.....	Mantenimiento

AVISO

1. Gracias por elegir nuestra campana extractora de cocina. Por favor lea el manual de instrucciones cuidadosamente antes de usar el electrodoméstico.

2. El trabajo de instalación debe de ser realizado por una persona calificada y competente para dicha labor.
3. El fabricante rechaza cualquier responsabilidad por daños o lesiones como resultado de un inapropiado seguimiento de los pasos sugeridos en este manual.

CARACTERISTICAS

1. La campana extractora está hecha con materiales de alta calidad siguiendo un diseño aerodinámico y moderno.



2. Equipada con un motor silencioso de alto poder de extracción de hojas centrífugas, y un filtro para la grasa que no es pegajoso y fácil de limpiar.
3. El aislamiento del panel de control del circuito de bajo voltaje (12v AC) hace la unidad más segura.
4. El diseño y construcción especial de un túnel de viento y colector de grasa absorben la suciedad rápidamente.

(3). Instalación

1. El cielo raso debe de soportar al menos 40kg (88lbs.) de peso y el grosor del mismo debe de ser $\geq 30\text{mm}$, (Ver Fig. 2) Taladre un hueco redondo de $\varnothing 170\text{mm}$ en el cielo raso.
2. Taladre 12 pequeños huecos para tornillos planos ST6*40mm


alrededor del hueco grande siguiendo el molde de la placa de colgar. Luego coloque cuatro barras angulares a las esquinas de la placa de colgar usando 8 tornillos planos M4*10mm y 8 tuercas M4. Luego, añada cuatro barras angulares a las anteriores con igual cantidad de tornillos y tuercas. (Las barras deben traspasar al menos 100mm) (Ver Fig.2)

3. Inserte el tubo extensible por el hueco de 170mm. (Ver Fig.3)
4. Conecte la chimenea interna en la placa de colgar utilizando 4 tornillos planos ST4*8mm y prepárese para el siguiente paso colocando 2 ganchos para la chimenea externa.(Ver Fig.4)
5. Instale el tubo de salida sobre la campana utilizando 4 tornillos planos ST4*8mm (Ver Fig.5)
6. Monte el cristal sobre la campana y ajuste los cuatro tornillos apropiadamente hasta que el cristal este asegurado. (Ver Fig.6)
7. Aguante la campana mientras la une a las barras angulares con 16 tornillos planos M4*10mm. (Ver Fig.7)
8. Inserte el tubo extensible sobre el tubo de salida de la campana. Cuando la campana este asegurada, baje la chimenea exterior. (Ver Fig. 9)

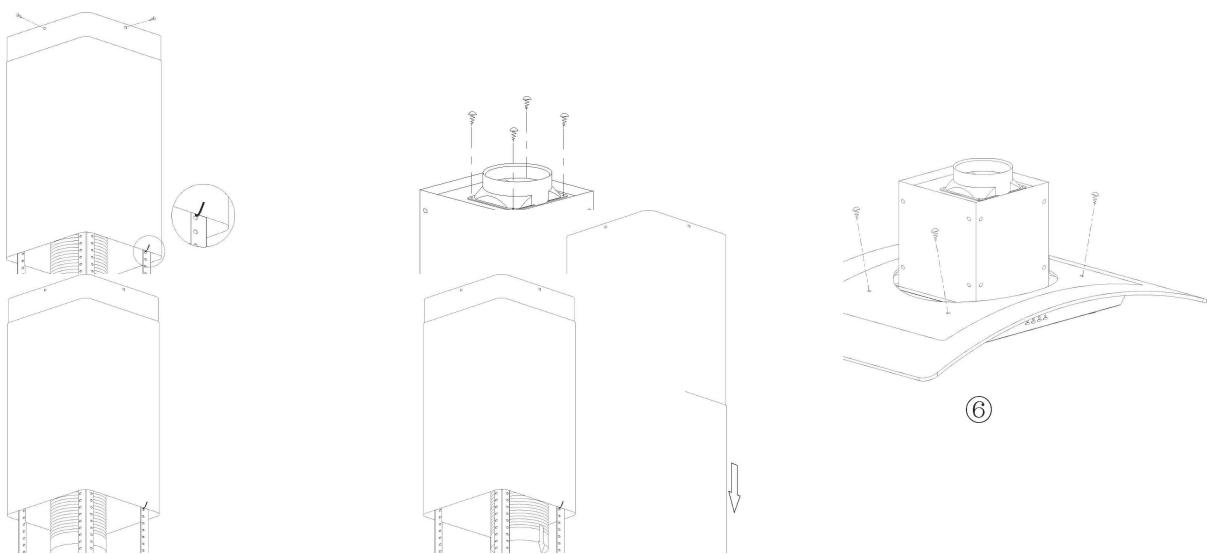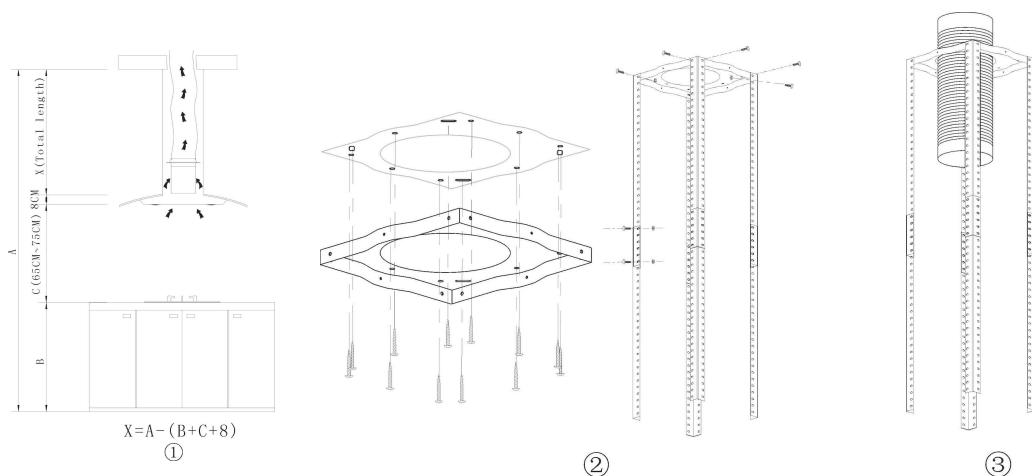

(4) Precauciones de instalación

1. Antes de comenzar a instalar, asegúrese de que el área este limpia para evitar succión de partículas de madera o polvo.
2. El tubo de ventilación de aire NO puede ser compartido con otro electrodoméstico, tal como tubo de gas, tubo calentador, o tubo de aire caliente.
3. El dobléz del tubo de ventilación debe de ser $\leq 120^\circ$, paralelo o por encima del punto de partida, y debe de ser conectado hacia una pared externa.
4. Después de ser instalada, asegúrese que la campana extractora esta nivelada para evitar acumulación de grasa en un extremo.

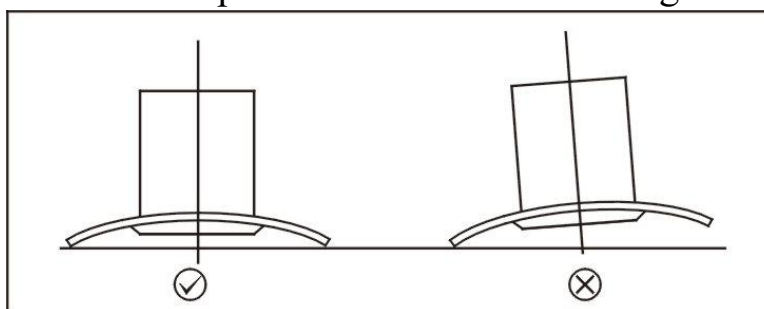


(5) Advertencia de seguridad

- ✧ Mantenga los niños fuera del uso de la campana extractora.
- ✧ La campana extractora es para uso doméstico solamente.
- ✧ Cualquier trabajo de instalación debe de ser realizado por un electricista calificado o una persona competente.
- ✧ La campana y los filtros deben de ser limpiados regularmente para mantenerlos en buen funcionamiento.
- ✧ Antes de limpiarse, siempre asegúrese que el electrodoméstico este apagado.
- ✧ Limpie la campana extractora de acuerdo al manual de instrucciones.
- ✧ Si hay un mal funcionamiento en el electrodoméstico, asegúrese que de que sea diagnosticado o reparado por un técnico especializado.
- ✧ Mantenga el cuarto ventilado cuando la campana extractora y la estufa de gas estén en uso.
- ✧ Antes de instalar o usar, lea todas las instrucciones y asegúrese que el voltaje (V) y la frecuencia (Hz) indicadas en el electrodoméstico sean exactamente las mismas de su hogar.

(6) USO

1. Encienda la campana extractora, el zumbador sonara cinco veces indicando que el electrodoméstico esta encendido.
2. Para velocidad baja, presione el primer botón (Slow). La luz 1 se encenderá, el zumbador sonara una vez, y el motor empezara a funcionar. Presiónelo de nuevo y el motor se detendrá.
3. Para velocidad mediana, presione el segundo botón (Mid). La luz 2 se encenderá, el zumbador sonara una vez, y el motor empezara a funcionar. Presiónelo de nuevo y el motor se detendrá.
4. Para velocidad alta, presione el tercer botón (High). La luz 3 se encenderá, el zumbador sonara una vez, y el motor empezara a funcionar. Presiónelo de nuevo y el motor se detendrá.
5. Para encender las luces, presione el cuarto botón (Light). La luz 4 se encenderá junto a las dos lámparas de la campana. Presiónelo de nuevo y las lámparas se apagaran.

Indicatorlight ① ② ③ ④

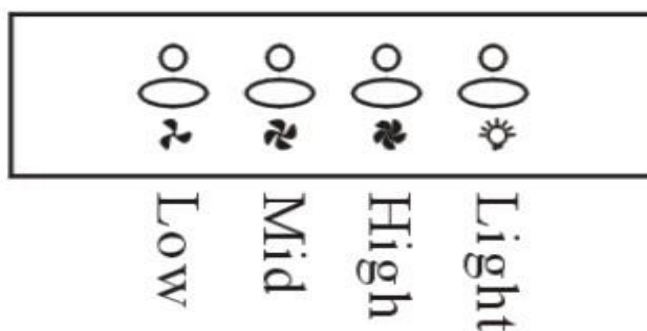

Pic6A


(7) Mantenimiento

7.1 Limpieza de la malla del filtro de carbón

La malla del filtro está hecha de acero inoxidable de alta densidad. Por favor no use detergentes corrosivos en su superficie. La limpieza regular del filtro mantiene el electrodoméstico en buen funcionamiento.

Método 1: Coloque la malla en agua limpia (40°C-50°C), agregue detergente no corrosivo, y deje remojar por 2-3 min. Use guantes y limpie con un cepillo suave. No aplique demasiada presión, puesto que la malla es delicada.

Método 2: Si está indicado, puede ponerse en el lavaplatos a una temperatura de alrededor de 60°C.

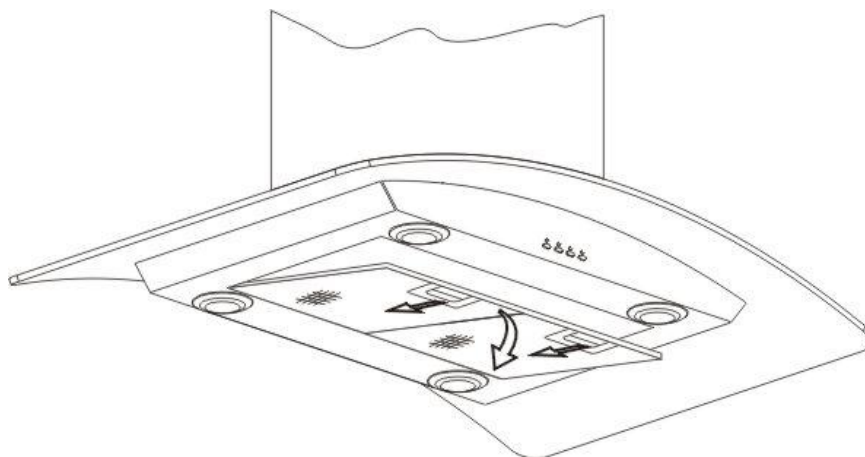

7.2 Notas de limpieza

- A. Para proteger la cubierta del aparato de corrosiones en un largo periodo de tiempo, este debe de ser limpiado con agua caliente con detergente no corrosivo cada dos meses.
- B. Por favor no usar detergentes abrasivos.
- C. Mantenga el motor u otras partes sensibles fuera del contacto con agua, ya que esto deteriorara el electrodoméstico.
- D. Antes de limpiar el electrodoméstico recuerde apagarlo.
- E. El filtro de carbón no debe de ser expuesto al calor.
- F. No rompa la barra externa del filtro de carbón.
- G. Si el enchufe o el cordón están dañados, cámbielos inmediatamente.